H2O Glass — Glass, Cordless Safety Water Kettle

A Hinged Lid (do not try to remove lid!)

B On / Off Switch with blue indicator light

C Minimum and Maximum Markings

D Stay Cool Handle

E Concealed heating element

F Power Base with plug and cord storage

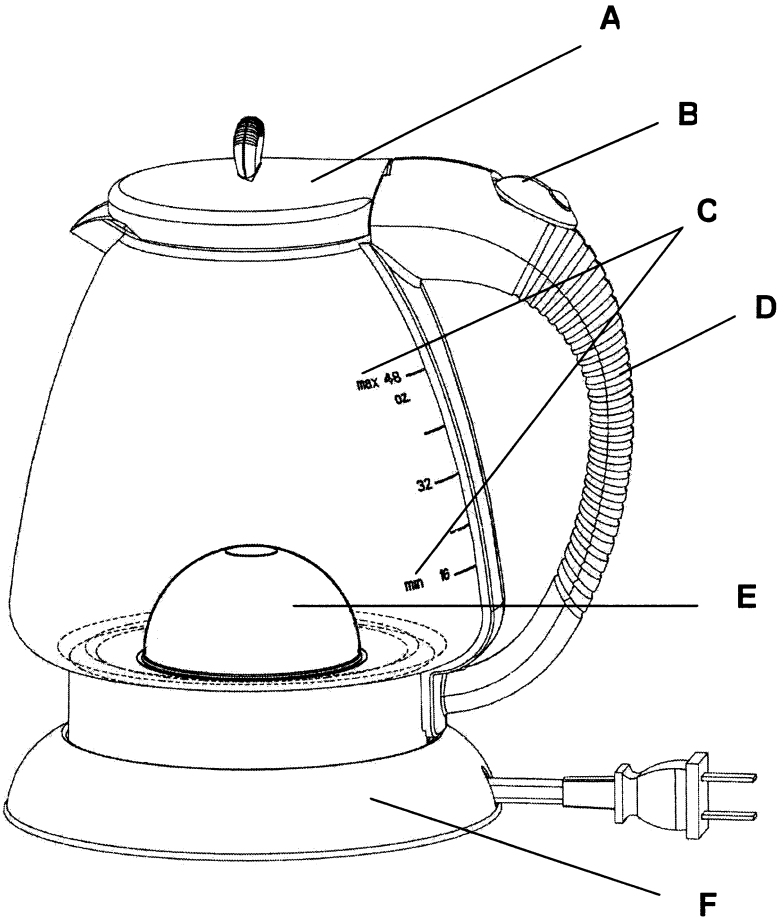

IMPORTANT: Handle kettle carefully...it is glass!

WELCOME TO THE CAPRESSO H2O CORDLESS GLASS KETTLE

The Capresso water kettle boils water faster, safer and more energy efficiently than your stovetop. Water heats instantly. When it comes to a boil, it shuts itself off. The Capresso water kettle is easy to operate. The universal power base is ideal for left or right hand use. The blue indicator adds style and practicality. Whenever the kettle shuts off, the blue indicator light turns off. With its high quality Schott glass and its beautiful design this kettle fits well in every kitchen environment.

CUSTOMER SERVICE

Should you require further information or if particular problems occur that are not covered in this manual, please call our toll free HELP LINE: 1-800-767-3554 from 9AM to 9PM Monday through Friday and from 9AM to 5PM Saturday Eastern Standard Time. If you call at any other time, please leave a message with your telephone number and when we can call you back. You can also send us a fax at 1-201-767-9684 or e-mail us at contact@capresso.com

PLEASE DON'T!

- Never boil water while the lid is open. The kettle will not shut off and boiling water may splash out of the kettle. This can cause severe injuries.
- Never try to remove the lid.
- When opening the lid, handle it gently and do not try to push it beyond its normal resistance. If you break the lid, the kettle will not work properly.
- Never fill kettle with anything but water.
- Do not add instant soups or any other soluble to the kettle.
- Do not use the kettle to thaw food of any kind.
- Do not use the kettle to make sauces or to melt cheese, butter or any other items.
- Never immerse the kettle in any liquid. Never put kettle or base in the dishwasher.

BEFORE USING FOR THE FIRST TIME

Read all Important Safeguards and Operating Instructions before using this kettle. Discard the first filling of boiling water to remove any dust and residues from the manufacturing process.

TO BOIL WATER

1. Remove kettle from base.
2, Open the lid until it stands vertically. DO NOT BEND LID FURTHER BACK!
3. Fill with the desired amount of fresh cold water. The kettle has minimum and maximum markings. Never underfill or overfill the kettle.
   CAUTION / DANGEROUS: Never fill above the MAX line. If you fill above the max line, boiling water will push out of the pouring spout. This can cause severe injuries and burns.
4. Close lid.
5. Place kettle on Power Base.
6. Plug cord into wall outlet.
7. Gently push the On switch upwards. The blue Water Level Indicator Light will turn on and the kettle begins to heat the water.
8. When the water comes to a boil the kettle will turn off automatically, the on-switch will jump down and the light will shut off.
9. Lift kettle from base and pour water out slowly.
10. Replace kettle.
11. If you want to bring the remaining water to a boil again, repeat step 7.

NOTE:
If the kettle is "ON" and you remove it from the base, it will shut off by itself.

HELPFUL HINTS:
- Never try to boil water with the lid open.
- Do not leave water standing in the kettle. Discard unused water.
- If the kettle is "ON" without water, the kettle will automatically turn itself off after a short while.
- You can lift the kettle from its base to turn it off at any time.

CLEANING
- Always unplug cord of power base before cleaning.
- Make sure kettle is cold.
- Clean the exterior surface with a clean, damp, soft cloth.
- Never use abrasive cleaners or scouring agents.
- Rinse out kettle and wipe dry with a soft, lint-free cloth.

Attention:
- Over time the stainless steel cover of the heating element inside the bottom of the kettle may change color slightly. This is caused by the intense heat of the heating element.
- If your water has a high iron content brownish stains may appear on the stainless steel element (this is also known as "boiler scale"). These stains can be wiped away with a cloth and a mild abrasive. Rinse kettle thoroughly with fresh water.

DECALCIFICATION
Hard water can leave calcium spots inside the kettle. Use a commercial descaling agent and follow the instructions that come with the agent.
NOTE: Make sure kettle is cold.

Use of Vinegar
You can also use white vinegar to descale the inside. Fill the kettle with 2 cups of water (16 oz) and add 6 tablespoons of white vinegar. Bring to a boil. Discard the solution and repeat if necessary. Rinse the kettle once or twice with fresh cold water.

Use of DURGOL
Capresso and many European companies recommend "DURGOL" liquid decalcifying agent. It removes calcium deposits up to 20 times faster than vinegar. Diluted DURGOL can also be used for coffee makers, steam irons (cold only!) and for many other needs in your household.
- Pour a cap-full of DURGOL over the round stainless steel cover. It will dissolve any stains. Rinse thoroughly with fresh cold water. Repeat once or twice if necessary. Do not heat the kettle!

See your local Capresso dealer or visit our website: www.capresso.com to order DURGOL.